

# RITCHEY®


BICYCLE COMPONENTS

**Break**  **Away**<sup>TM</sup>

## Bulletin

This is an important supplement to the instructions included with the Ritchey BreakAway Bicycle.

- The proper torque setting for the bottom bracket coupling is 35 in-lbs or 40Kg-cm
- No grease should be used in the installation coupling. A light lubricant (such as WD-40) can be applied to prevent potential corrosion.
- Make sure that the clamp ends of the coupling collar do not 'bottom out' or touch each other when properly torqued. There should always be a slight space between the the two surfaces (at least .5mm - you should be able to see light) when it is properly installed. If the ends of your coupling touch, stop riding the bike and contact your local Break-Away retailer or Ritchey directly for purchase of a replacement coupling collar. See photo.

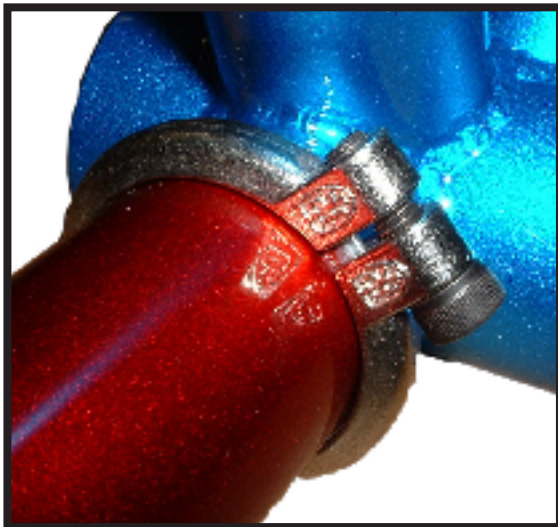

**Correct**



**Incorrect**

Contact Ritchey for Replacement

phone: 800-748-2439 ext.6704 or 6705 for Sales - fax us at: 650-261-1317  
www.ritcheylogic.com - check out our new weekly updates