


# Break-Away™ Bike

## Packing Instructions


Break  Away

**RITCHEY**

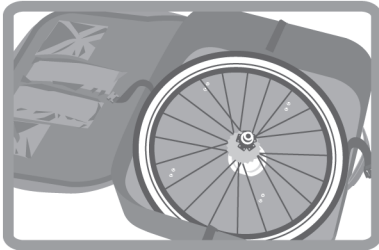


**STEP 1**

Place rear wheel cassette side down without quick release.

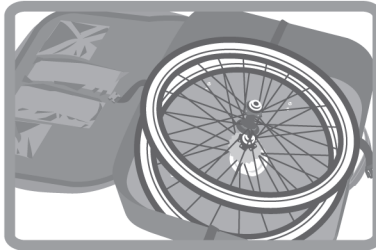

**STEP 2**


Place front wheel slightly offset on top of rear wheel without quick release.

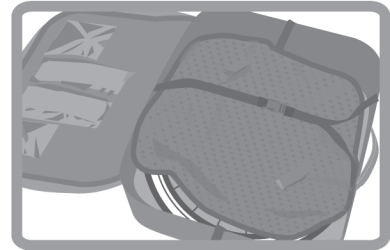

**STEP 3**


Place protector mat on top. Tie/connect straps.

**RITCHEY**

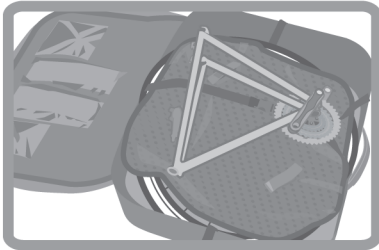


**STEP 4**

Place rear triangle as shown. Remove left side pedal or crank.

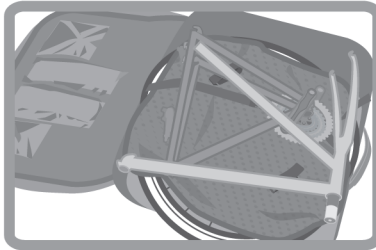

**STEP 5**


Place front triangle as shown with down tube feeding through rear stays.

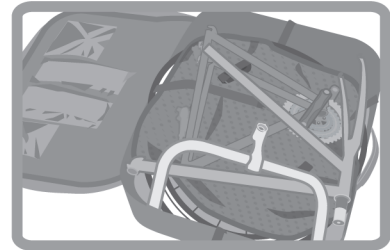

**STEP 6**


Place bars as shown.

**RITCHEY**

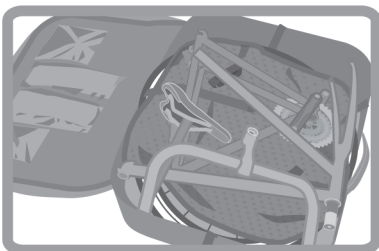


**STEP 7**

Place saddle and misc parts/shoes as shown. NOTE: To reduce chances of scratching paint use additional padding or packing material.

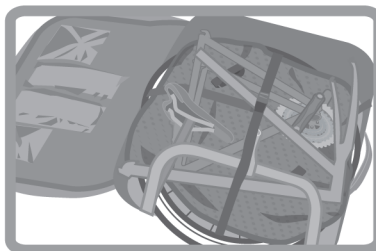

**STEP 8**

Connect straps as shown - secure tightly.

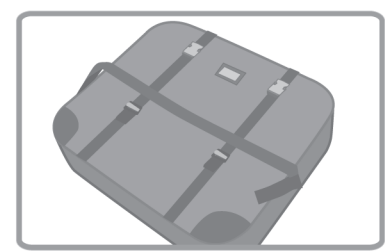

**STEP 9**

Finally zip and strap. Done!